



KOHLER®

GROUP 1-CRANKSHAFT


CV18, CV20, CV22, CV23, CV25, CV620, CV624, CV640,
CV670, CV675, CV680, CV724, CV725, CV730, CV740, CV745, CV750

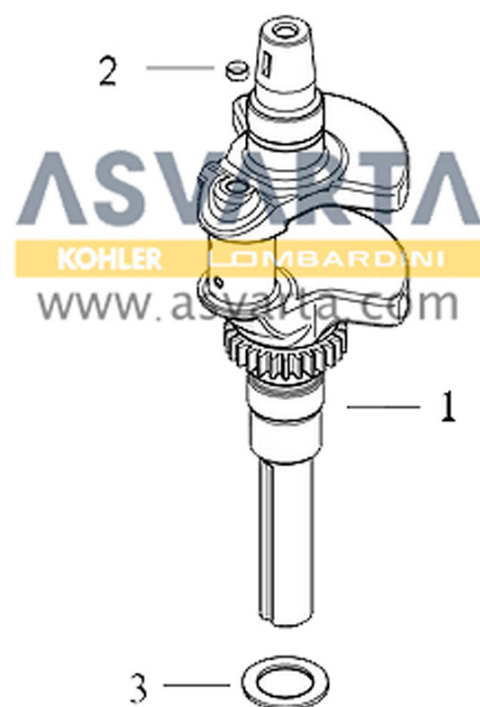


GROUP 2-CRANKCASE
CV18,CV20,CV22,CV23,CV25,CV620,CV624,CV640,
CV670,CV675,CV680,CV724,CV725,CV730,CV740,CV745,CV750

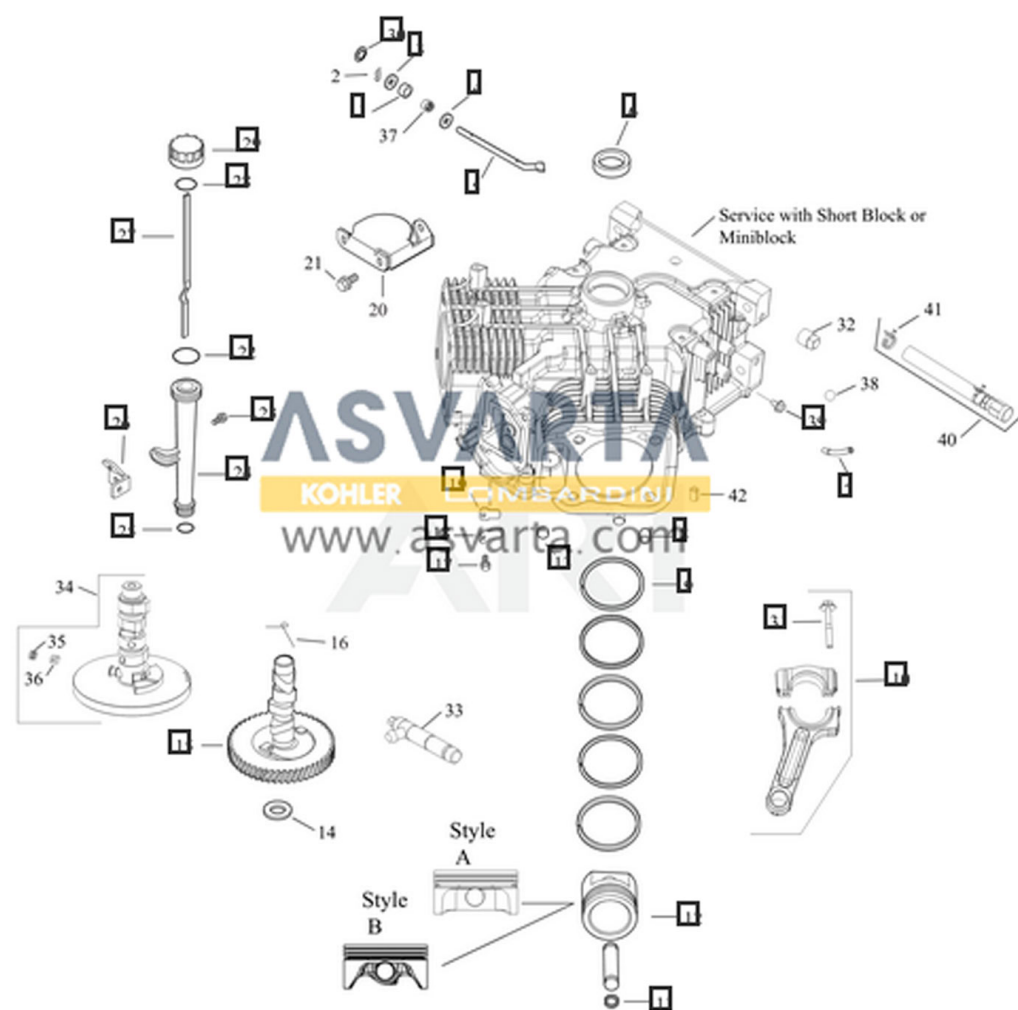

GROUP 3-LUBRICATION
CV18,CV20,CV22,CV23,CV25,CV620,CV624,CV640,
CV670,CV675,CV680,CV724,CV725,CV730,CV740,CV745,CV750

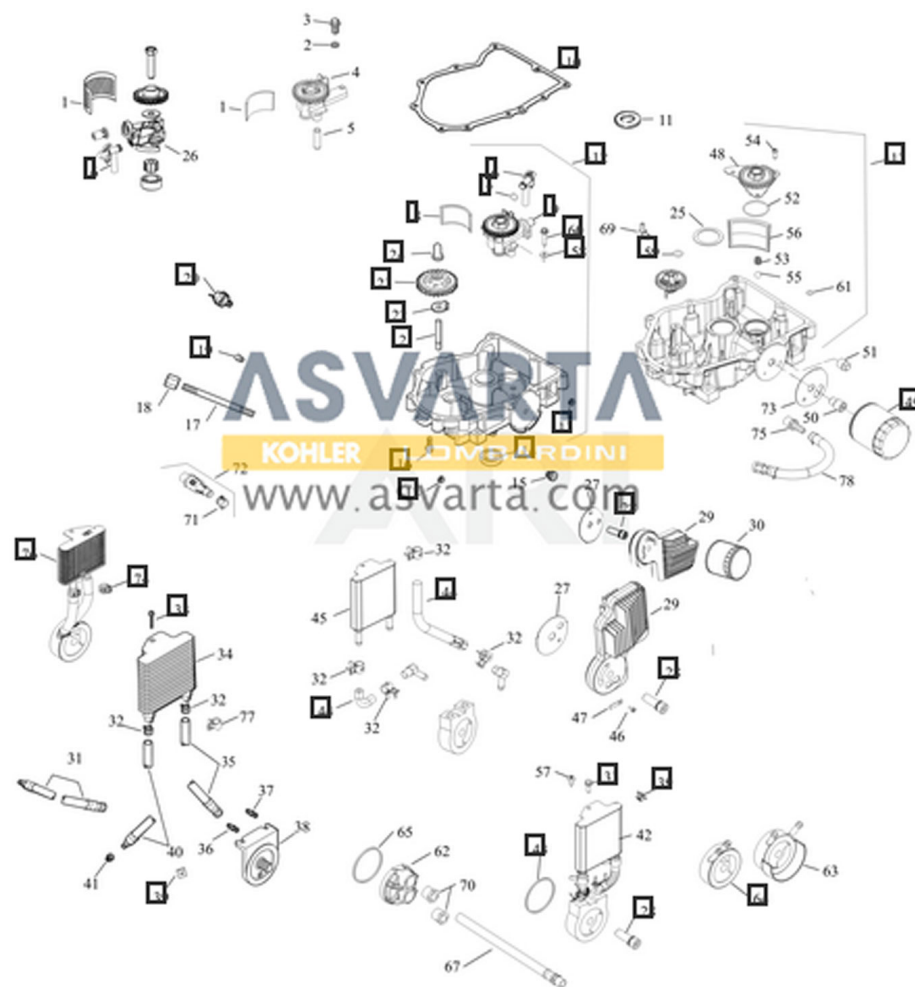

GROUP 4-HEAD/VALVE BREATHER
CV18,CV20,CV22,CV23,CV25,CV620,CV624,CV640,
CV670,CV675,CV680,CV724,CV725,CV730,CV740,CV745,CV750

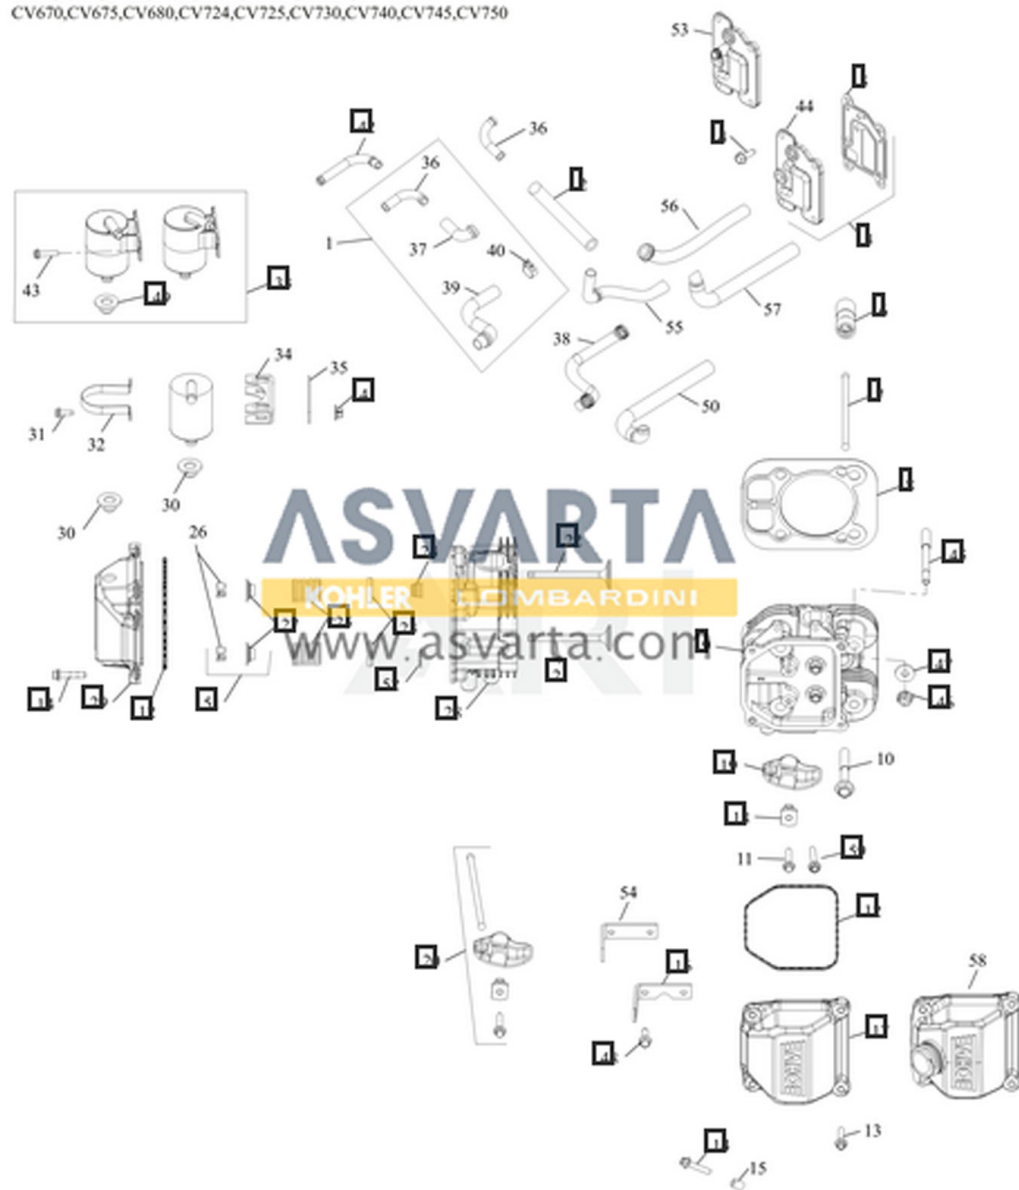


GROUP 5-IGNITION!
CV18,CV20,CV22,CV23,CV25,CV620,CV624,CV640,
CV670,CV675,CV680,CV724,CV725,CV730,CV740,CV745,CV750




GROUP 7-STARTER
CV18,CV20,CV22,CV23,CV25,CV620,CV624,CV640,
CV670,CV675,CV680,CV724,CV725,CV730,CV740,CV745,CV750


Service starter components according to the part number
printed on the starter. Starter components are NOT
interchangeable.

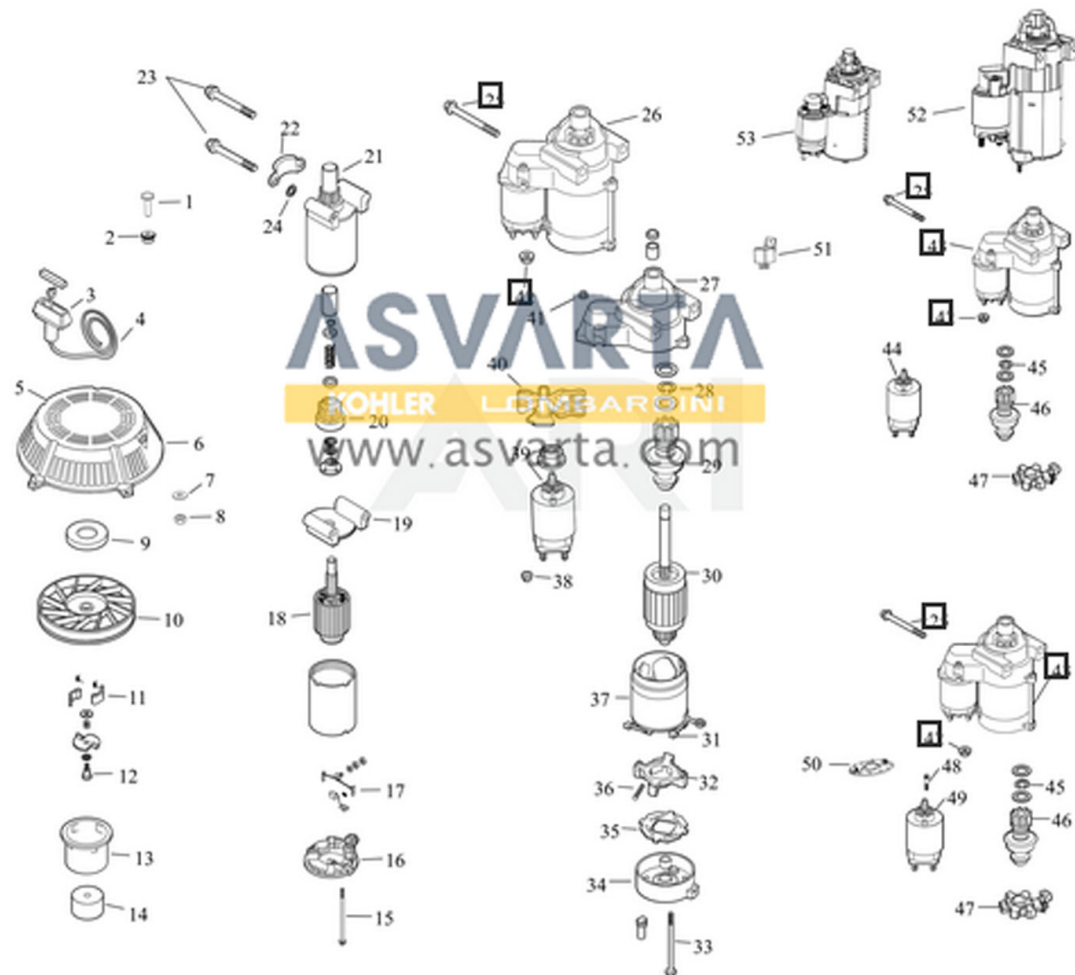


GROUP 8-FUEL SYSTEM
CV18,CV20,CV22,CV23,CV25,CV620,CV624,CV640,
CV670,CV675,CV680,CV724,CV725,CV730,CV740,CV745,CV750

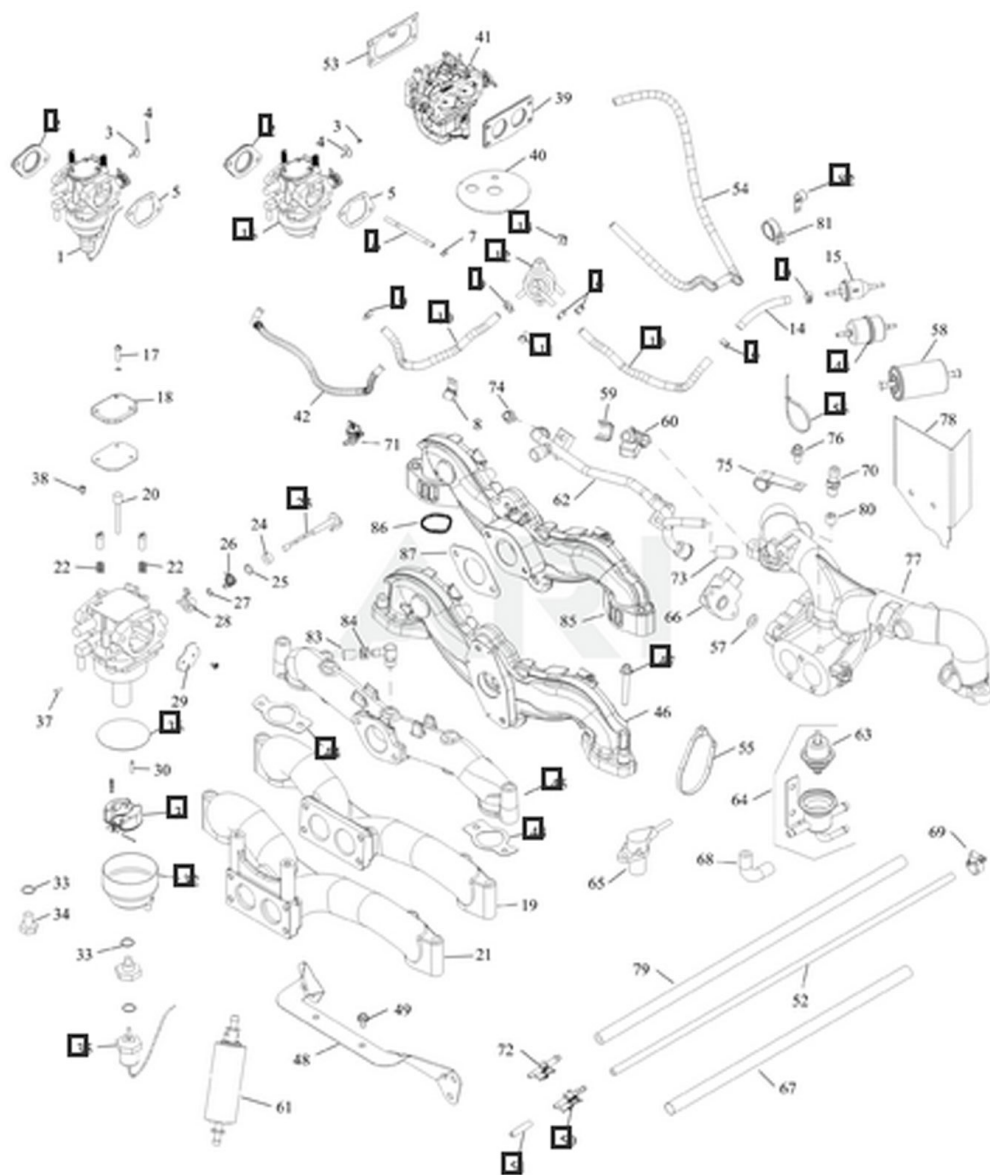

GROUP 9-ENGINE CONTROLS
CV18,CV20,CV22,CV23,CV25,CV620,CV624,CV640,
CV670,CV675,CV680,CV724,CV725,CV730,CV740,CV745,CV750

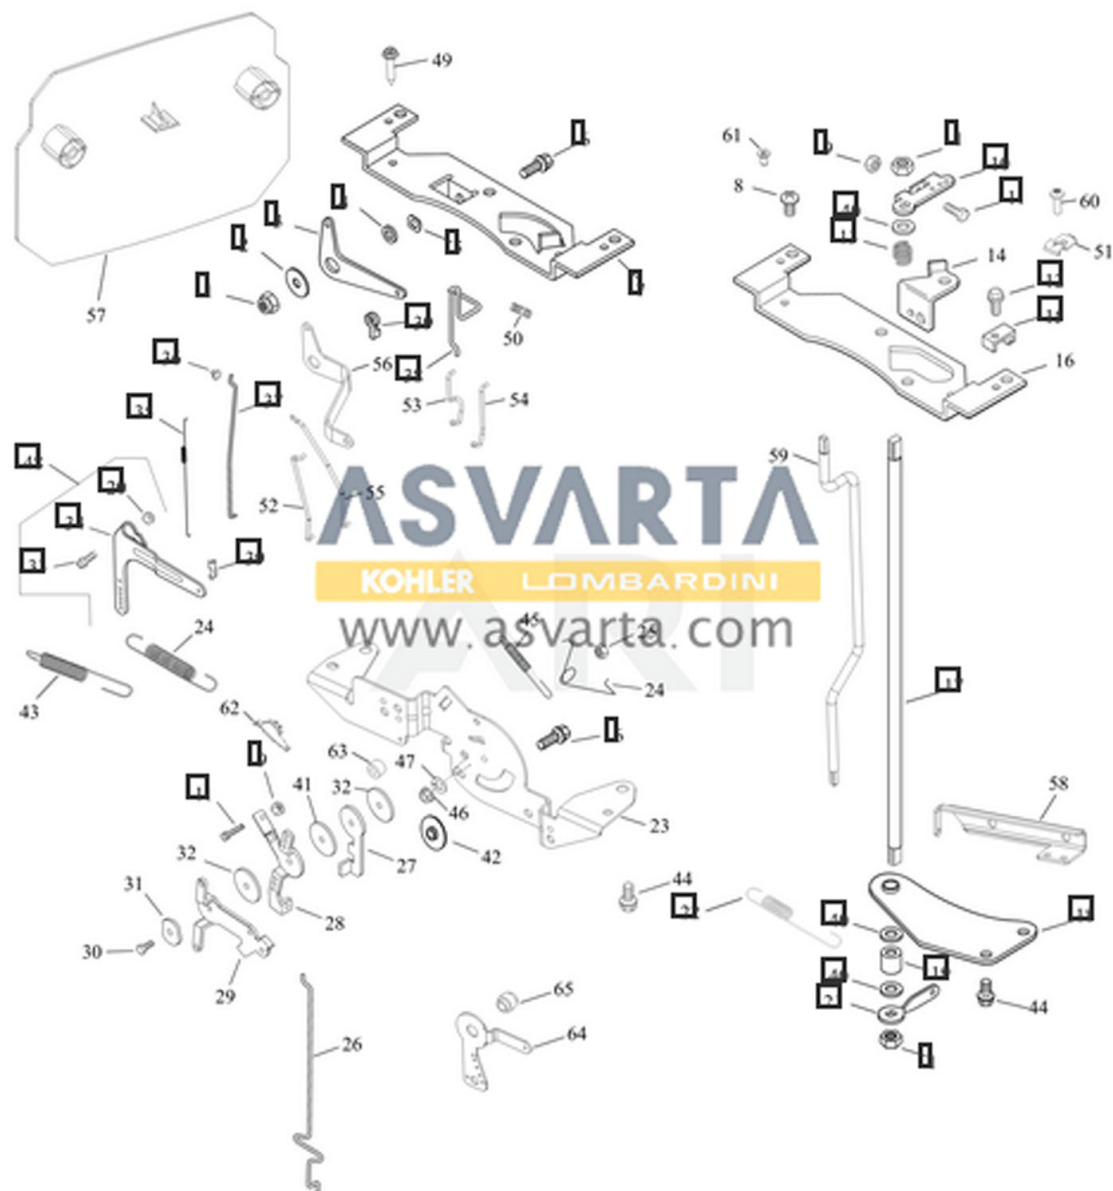

GROUP 10-AIR INTAKE
CV18,CV20,CV22,CV23,CV25,CV620,CV624,CV640,
CV670,CV675,CV680,CV724,CV725,CV730,CV740,CV745,CV750

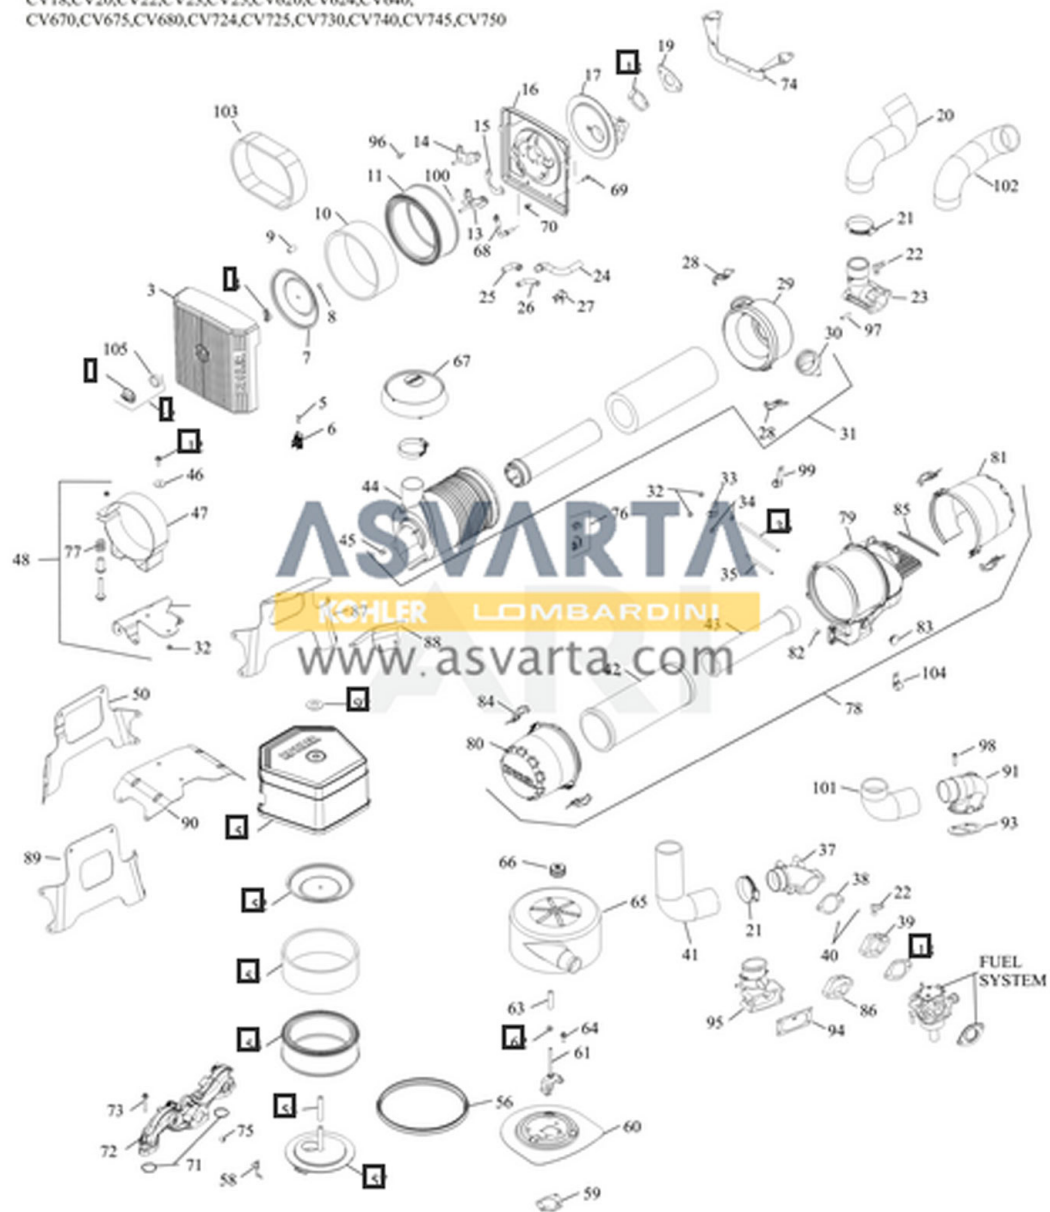

GROUP 11-EXHAUST
CV18,CV20,CV22,CV23,CV25,CV620,CV624,CV640,
CV670,CV675,CV680,CV724,CV725,CV730,CV740,CV745,CV750

