



KOHLER®

GROUP 1-CRANKSHAFT
KT600, 610, 620, 710, 715, 725, 730, 735, 740, 745

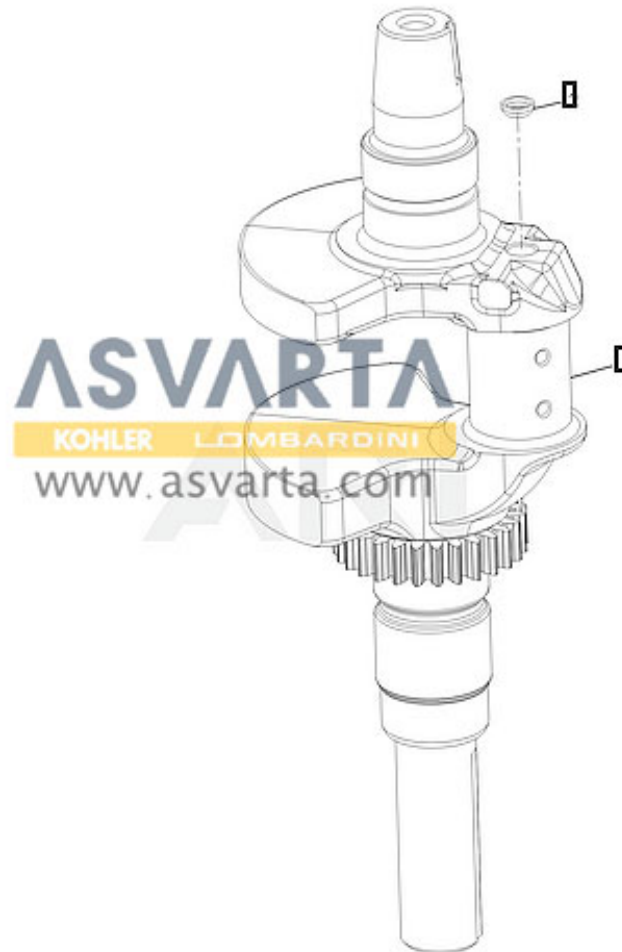


GROUP 2-CRANKCASE
KT600, 610, 620, 715, 725, 730, 735, 740, 745

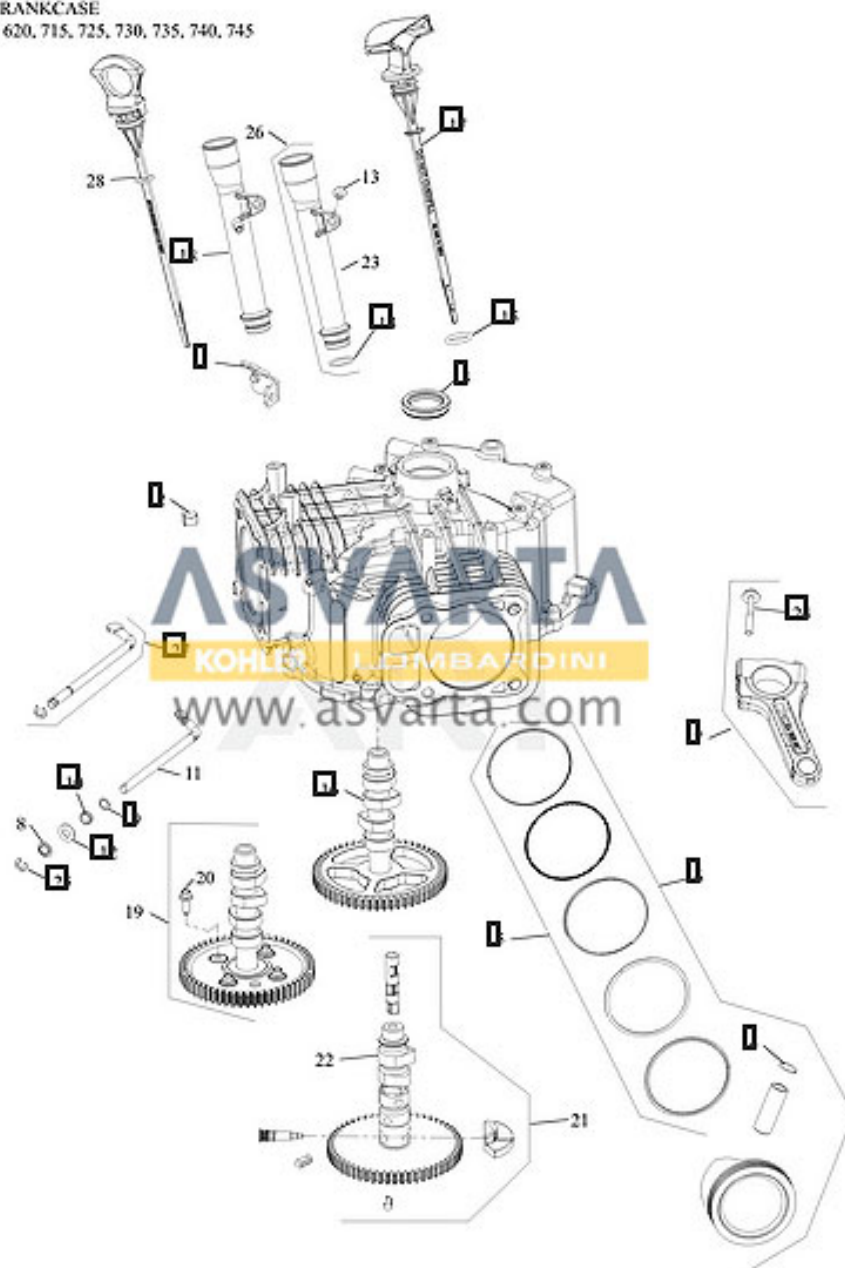


GROUP 3-LUBRICATION


KT600, 610, 620, 715, 725, 730, 735, 740, 745

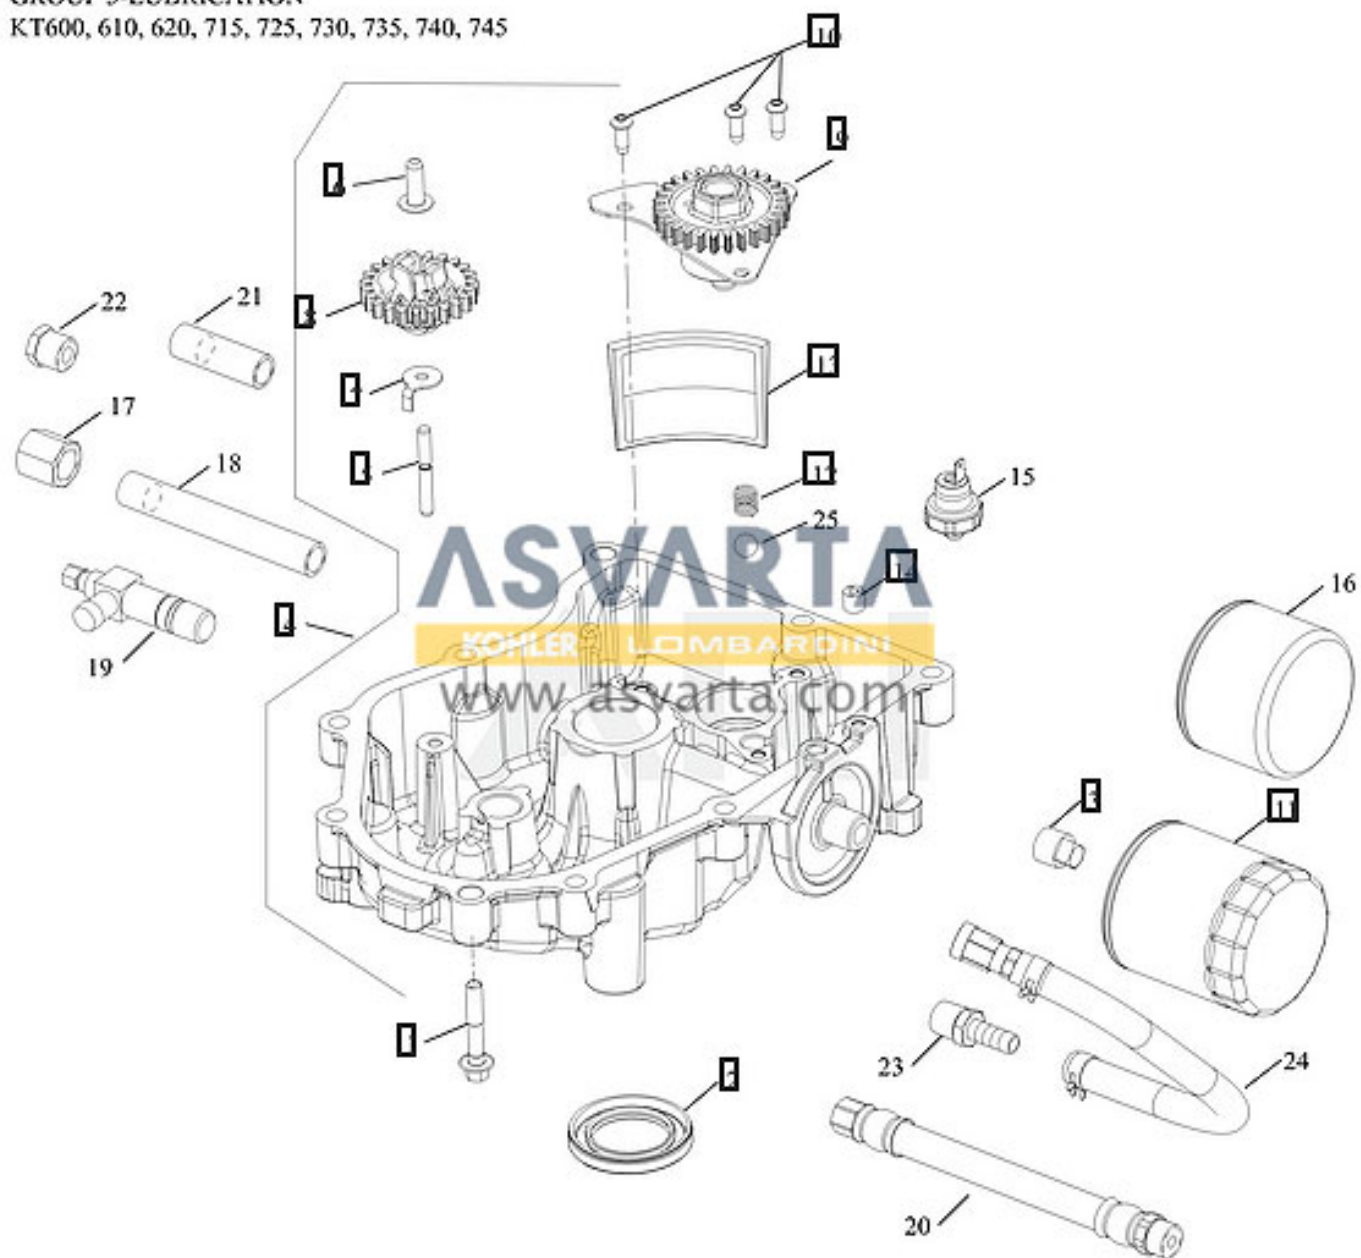


GROUP 4-HEAD/VALVE BREATHER
KT 600, 610, 620, 715, 725, 730, 735, 740, 745

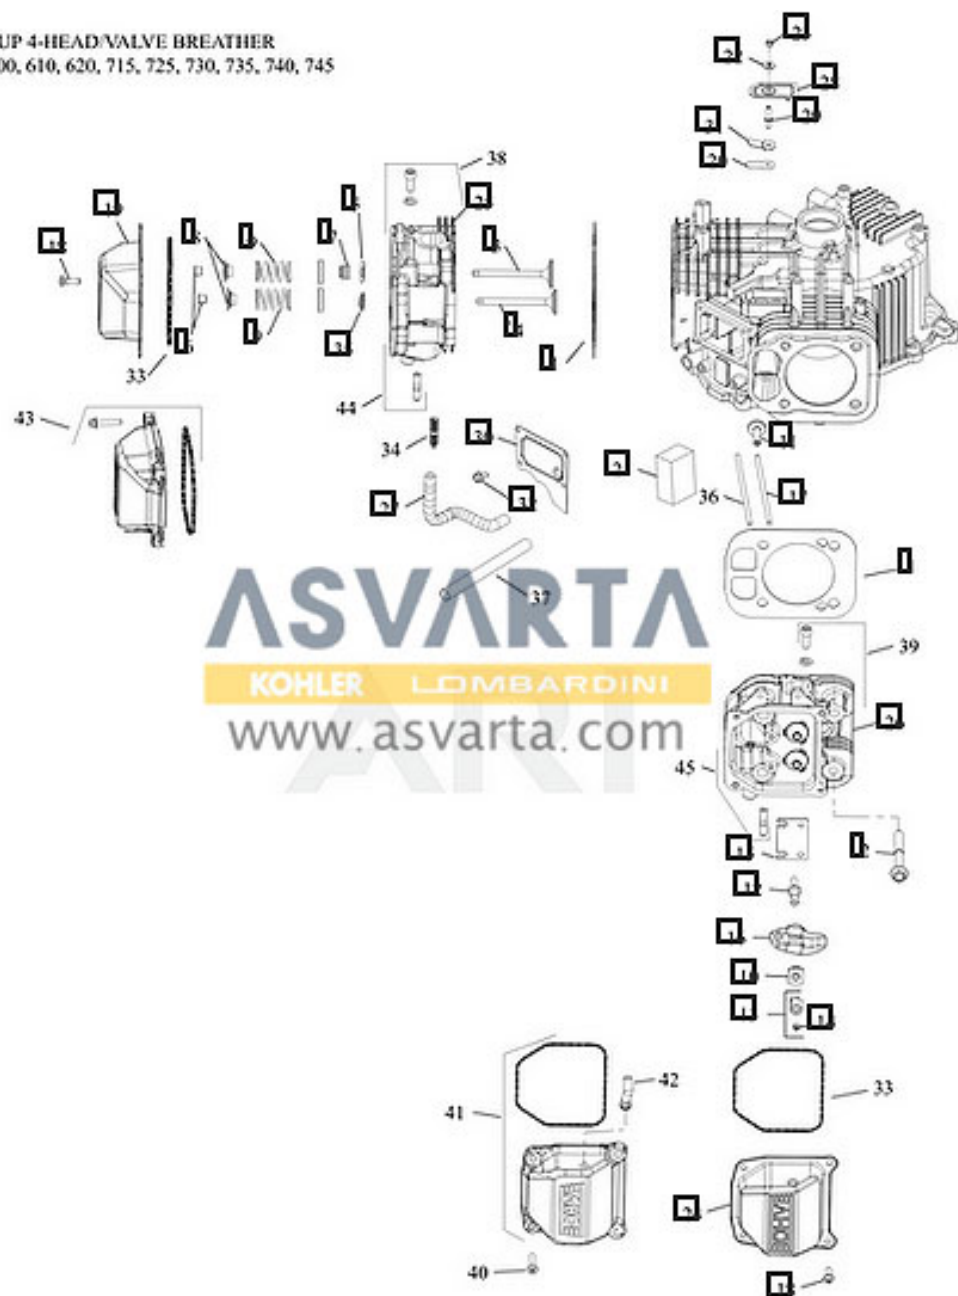


GROUP 5-IGNITION
KT600, 610, 620, 715, 725, 730, 735, 740, 745

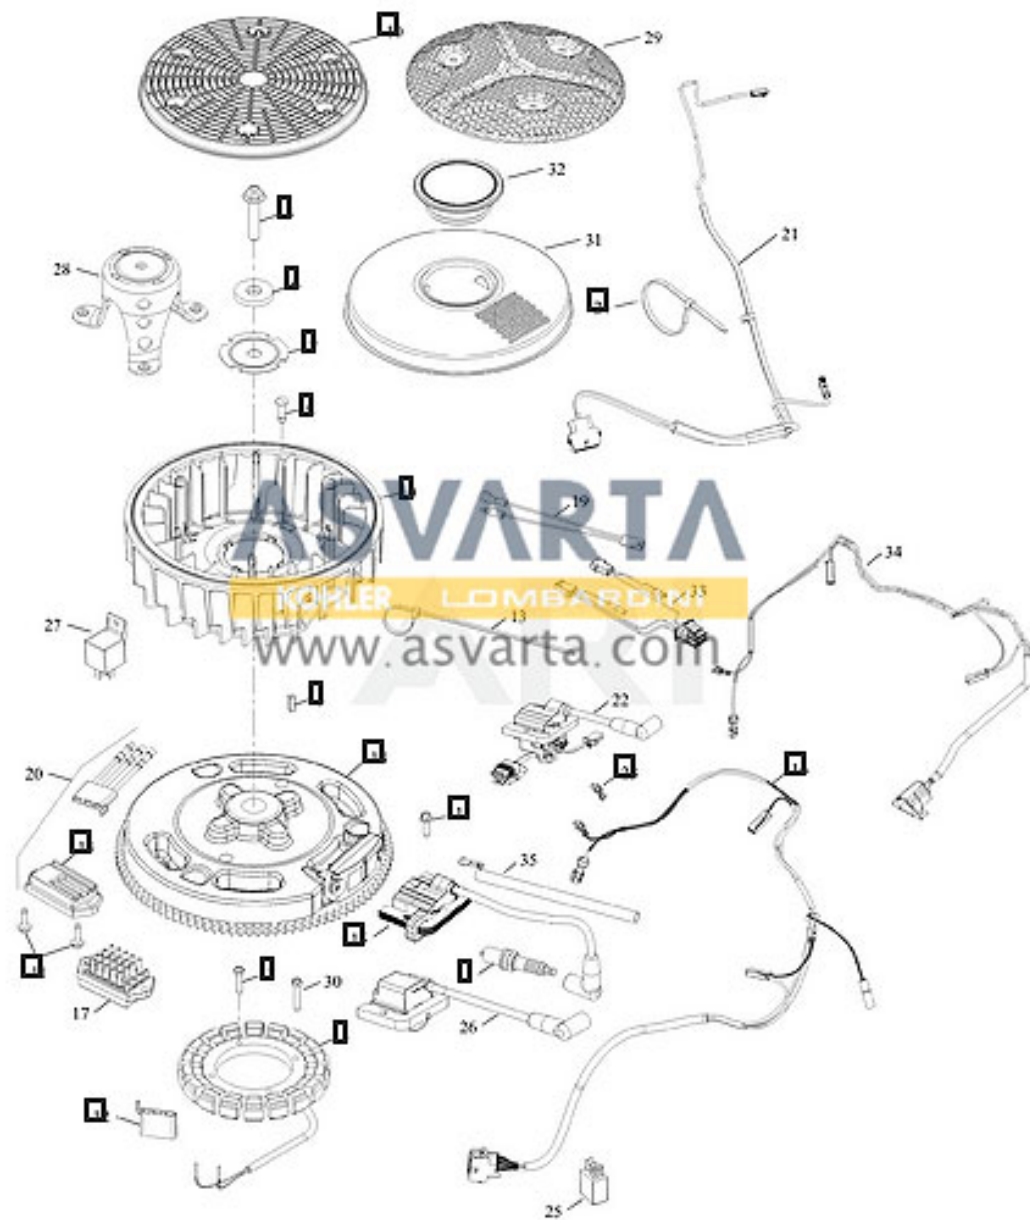


GROUP 6-BLOWER HOUSING
KT600, 610, 620, 715, 725, 730, 735, 740, 745

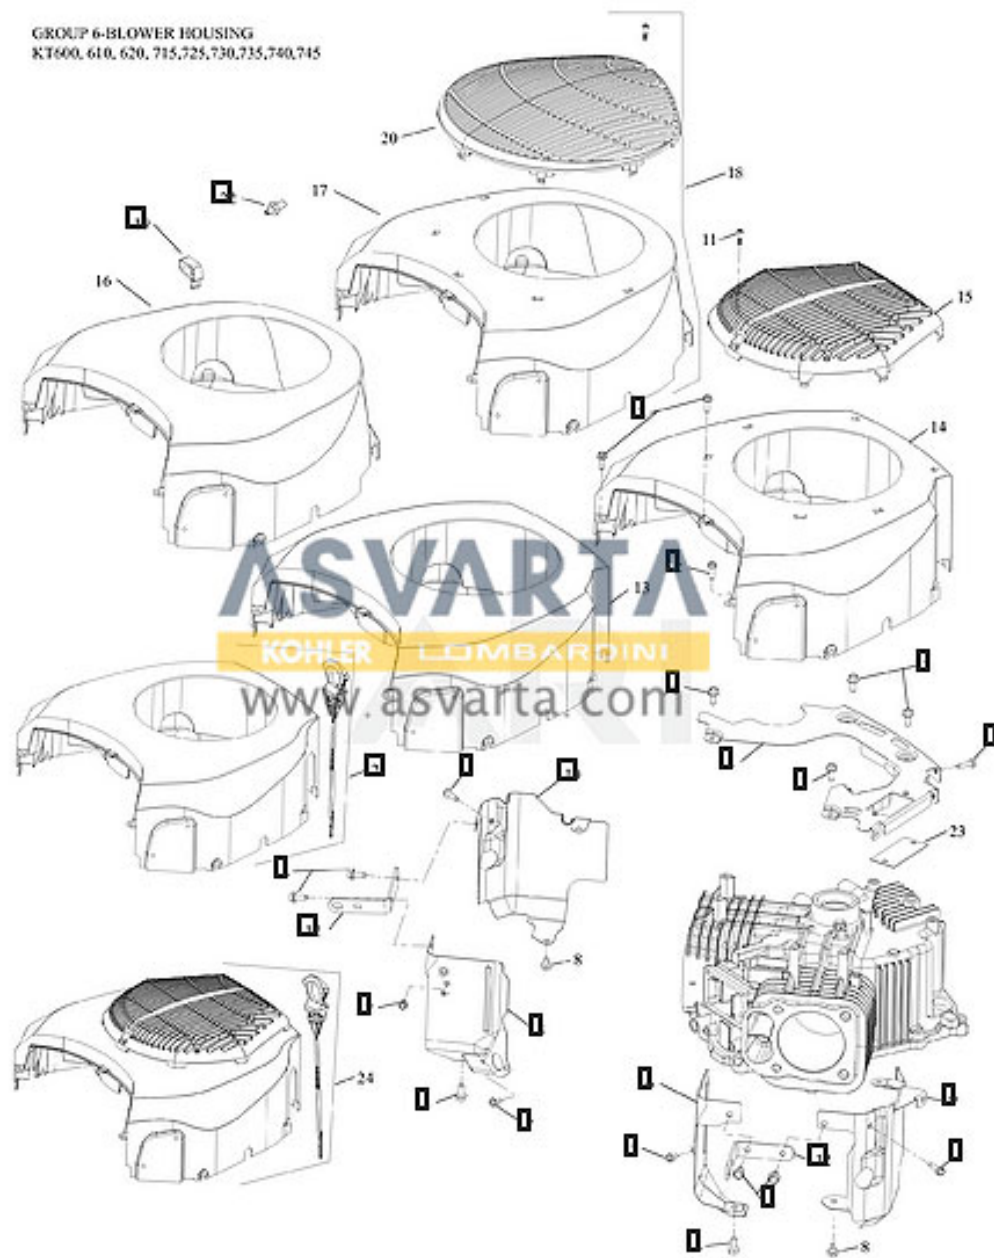


GROUP 7-STARTER
KT600, 610, 620, 715, 725, 730, 735, 740, 745

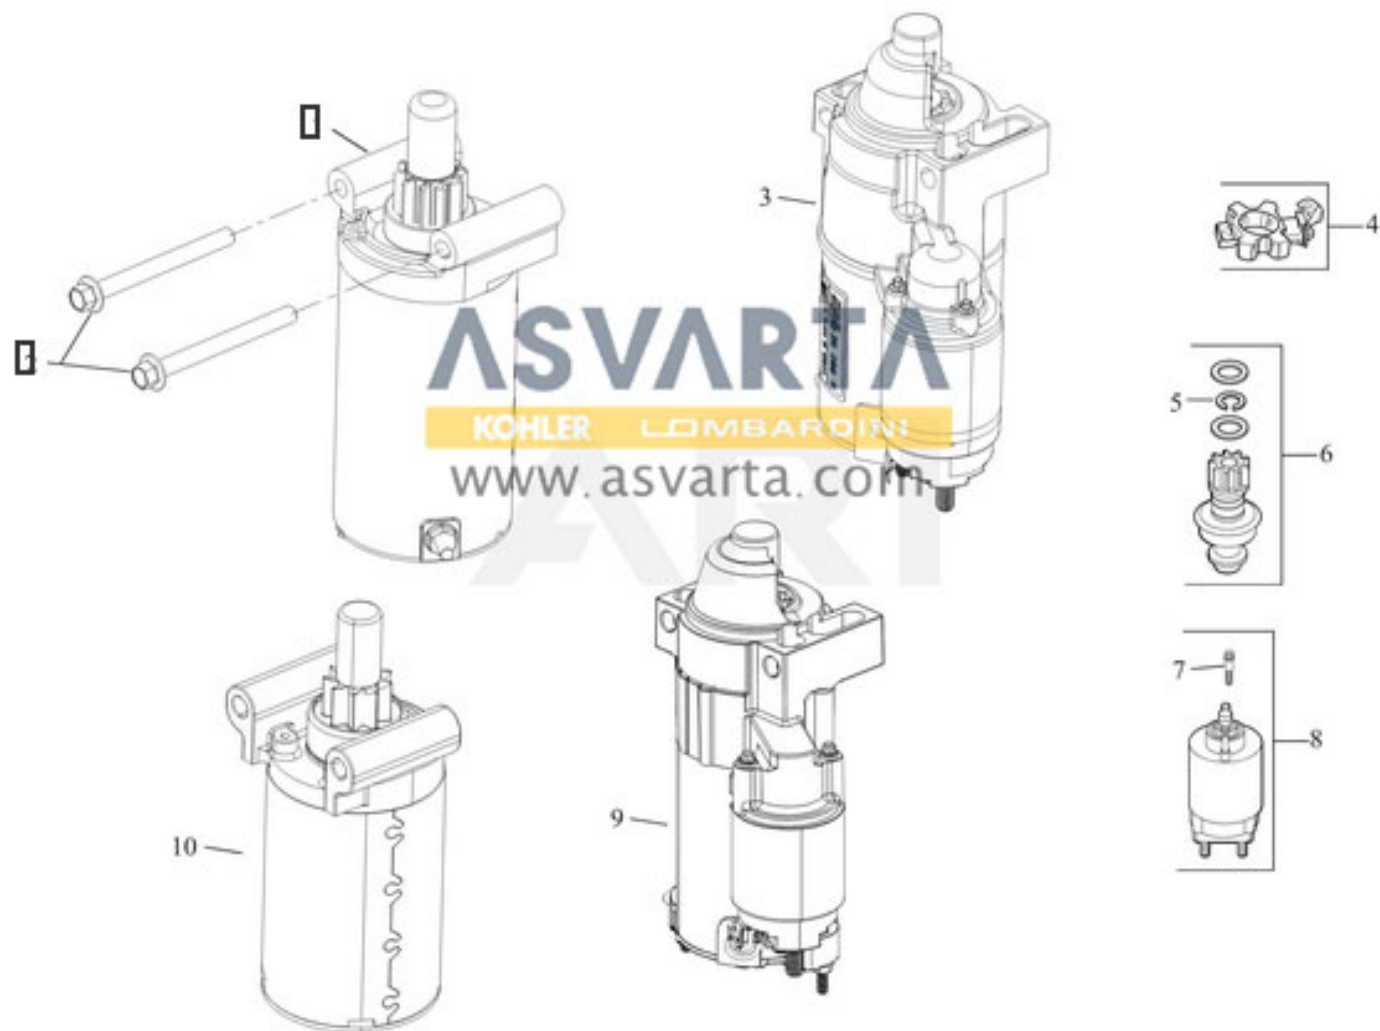


GROUP 8-FUEL SYSTEM
KT600, 610, 620, 715, 725, 730, 735, 740, 745

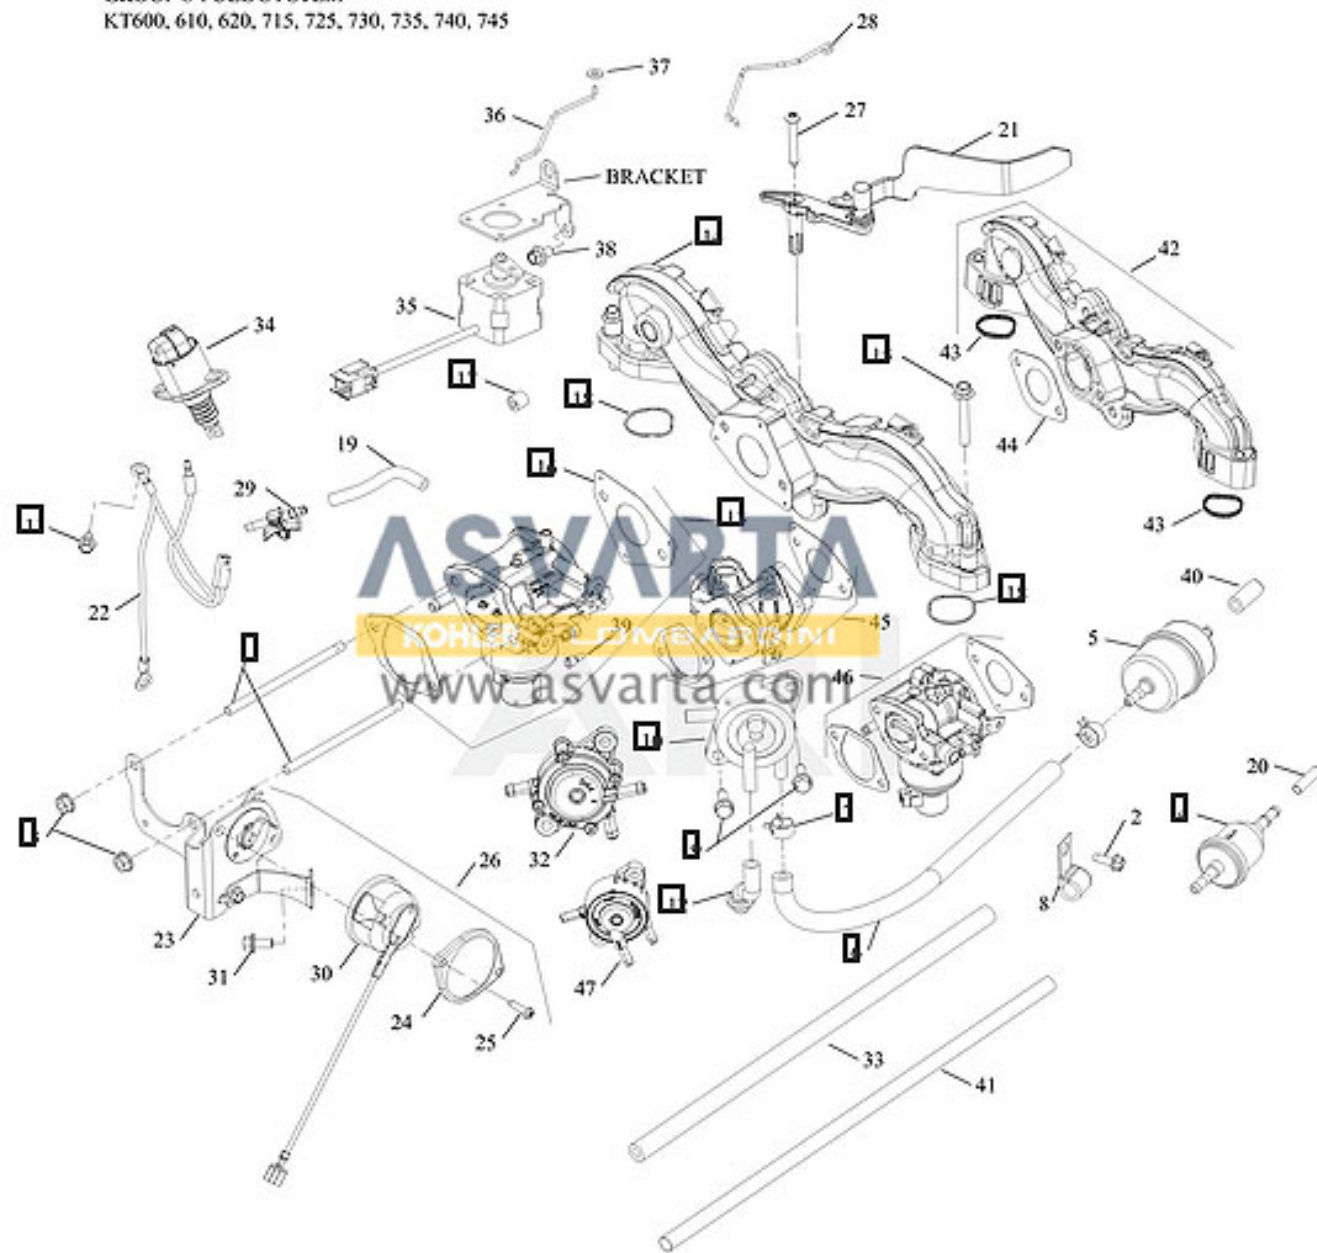

GROUP 9-ENGINE CONTROLS
KT600, 610, 620, 715, 725, 730, 735, 740, 745

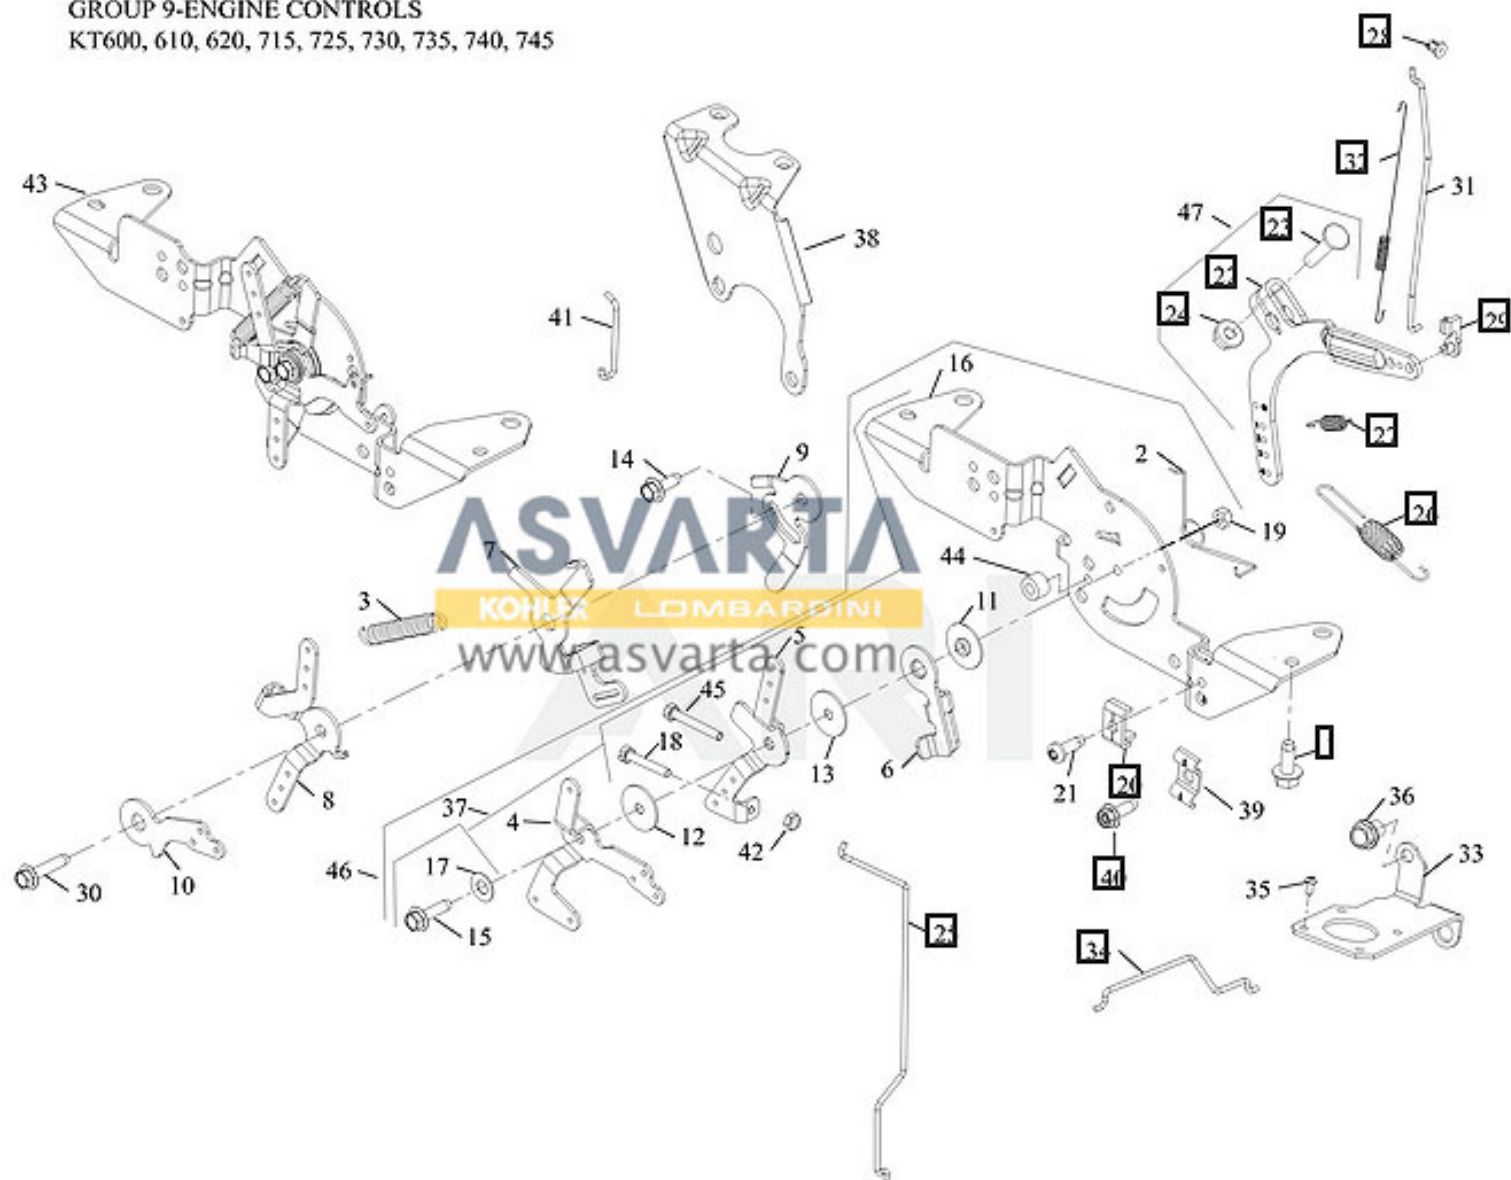

GROUP 10-AIR INTAKE
KT600, 610, 620, 715, 725, 730, 735, 740, 745

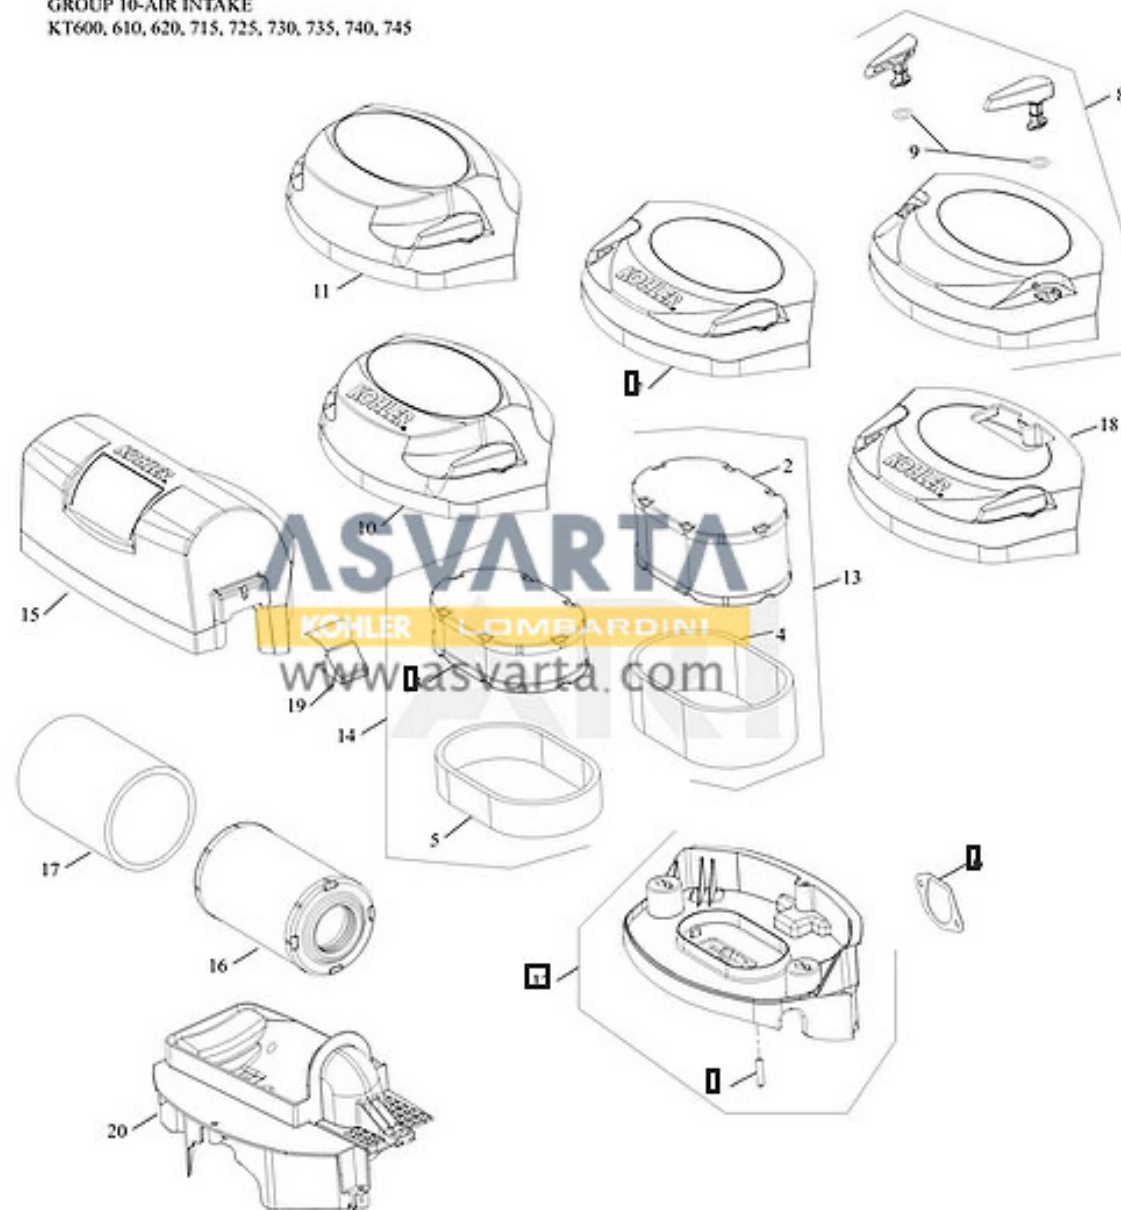

GROUP 11-EXHAUST

KT600, 610, 620, 715, 725, 730, 735, 740, 745

