



# KOHLER.

## GROUP 1-CRANKSHAFT


SV470, 471, 480, 530, 540, 541, 590, 591, 600, 601, 610, 620

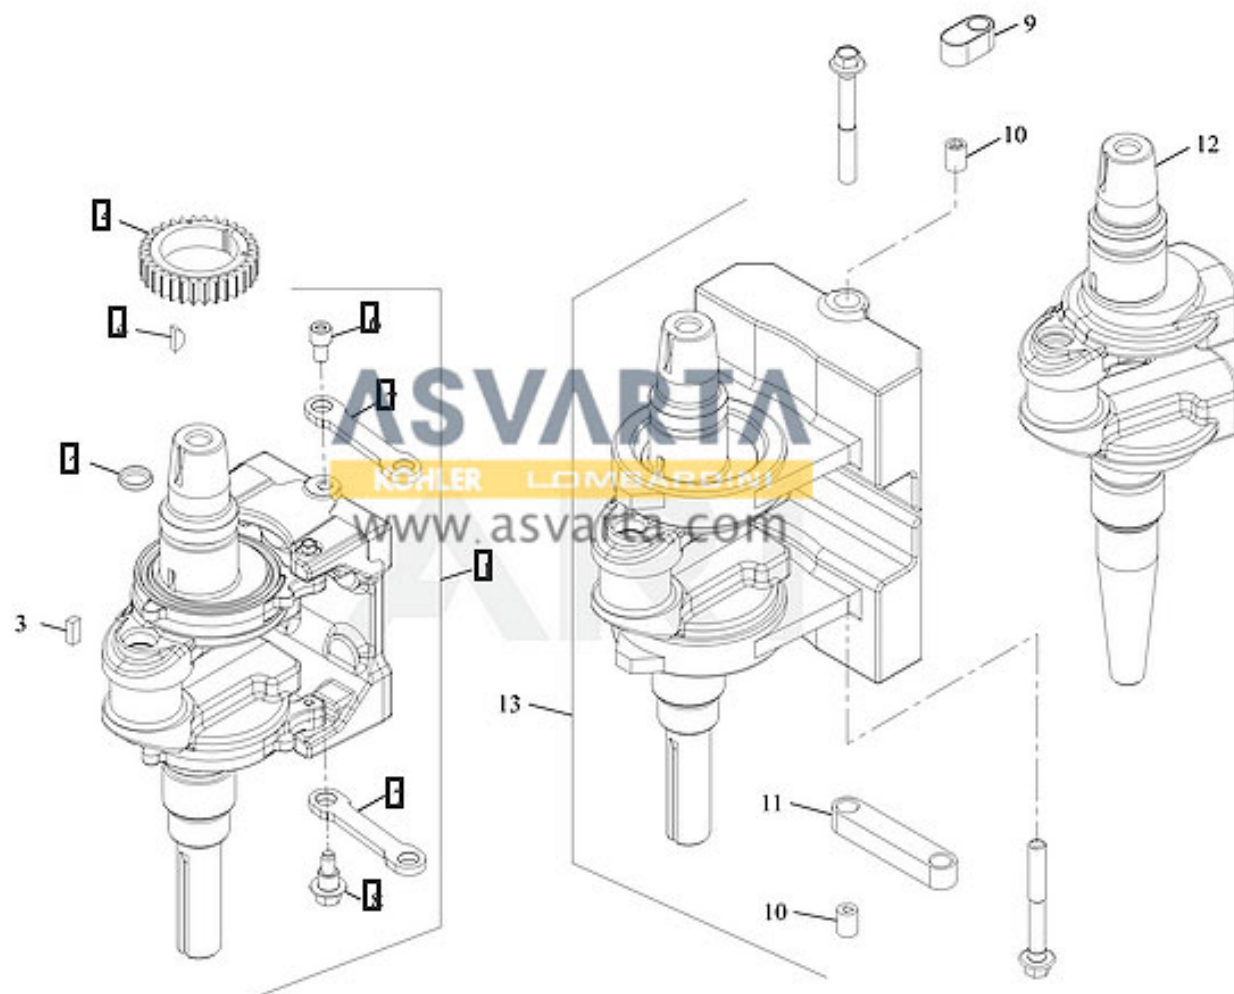

GROUP 2-CRANKCASE  
SV470, 471, 480, 530, 540, 541, 590, 591, 600, 601, 610, 620

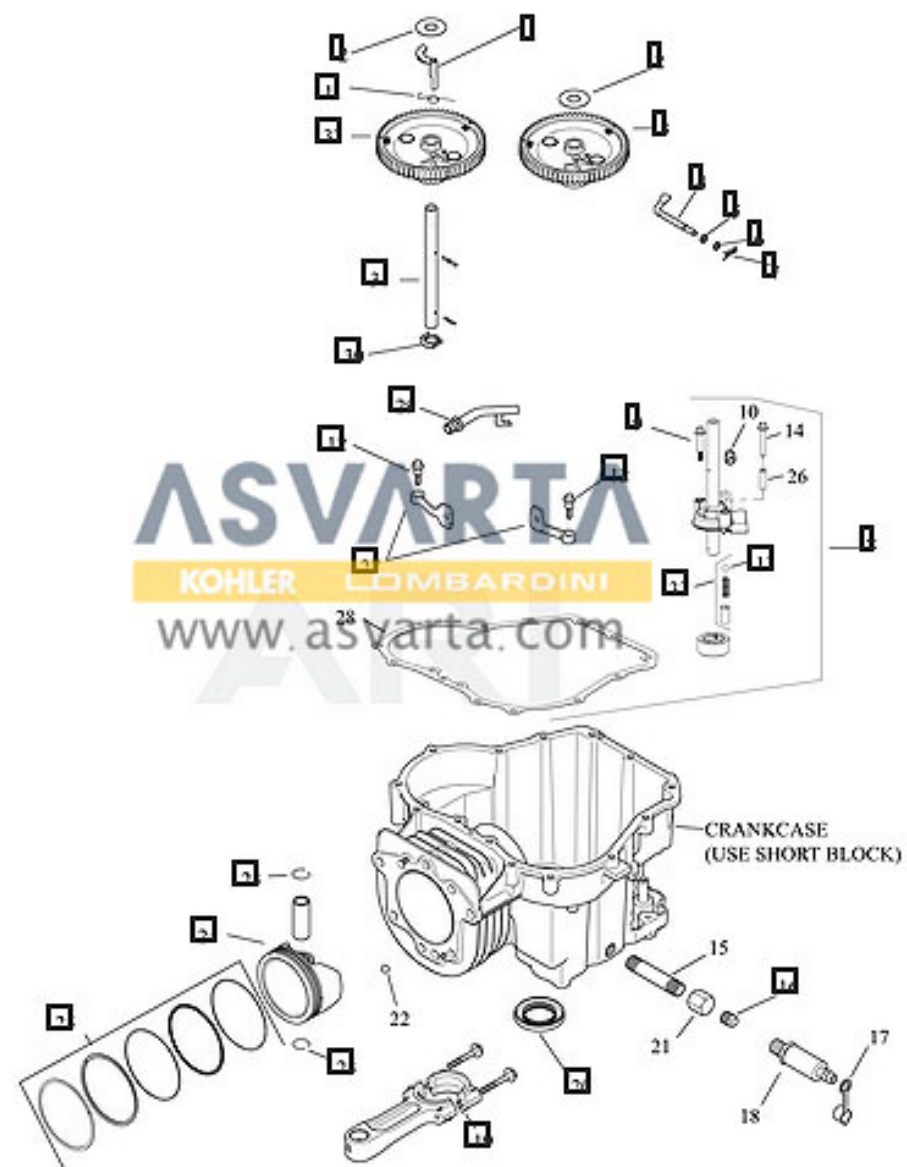


GROUP 3-LUBRICATION  
SV470, 471, 480, 530, 540, 541, 590, 591, 600, 601, 610, 620

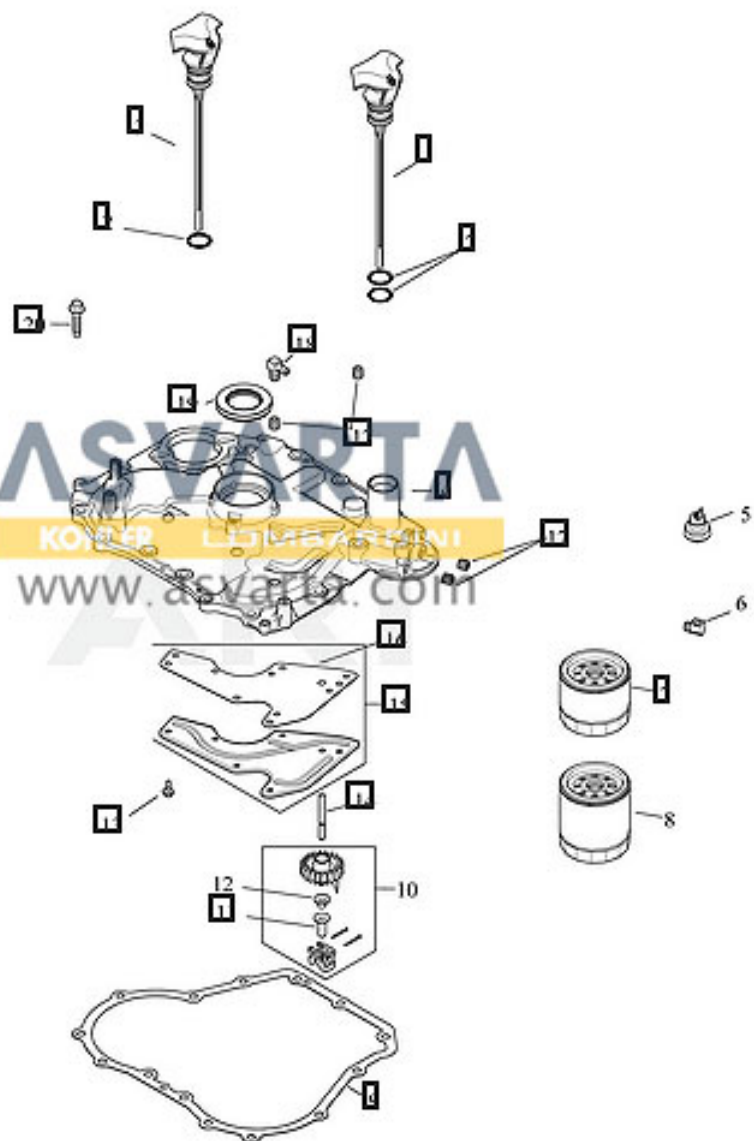



GROUP 4-HEAD/VALVE BREATHER

SV470, 471, 480, 530, 540, 541, 590, 591, 600, 601, 610, 620

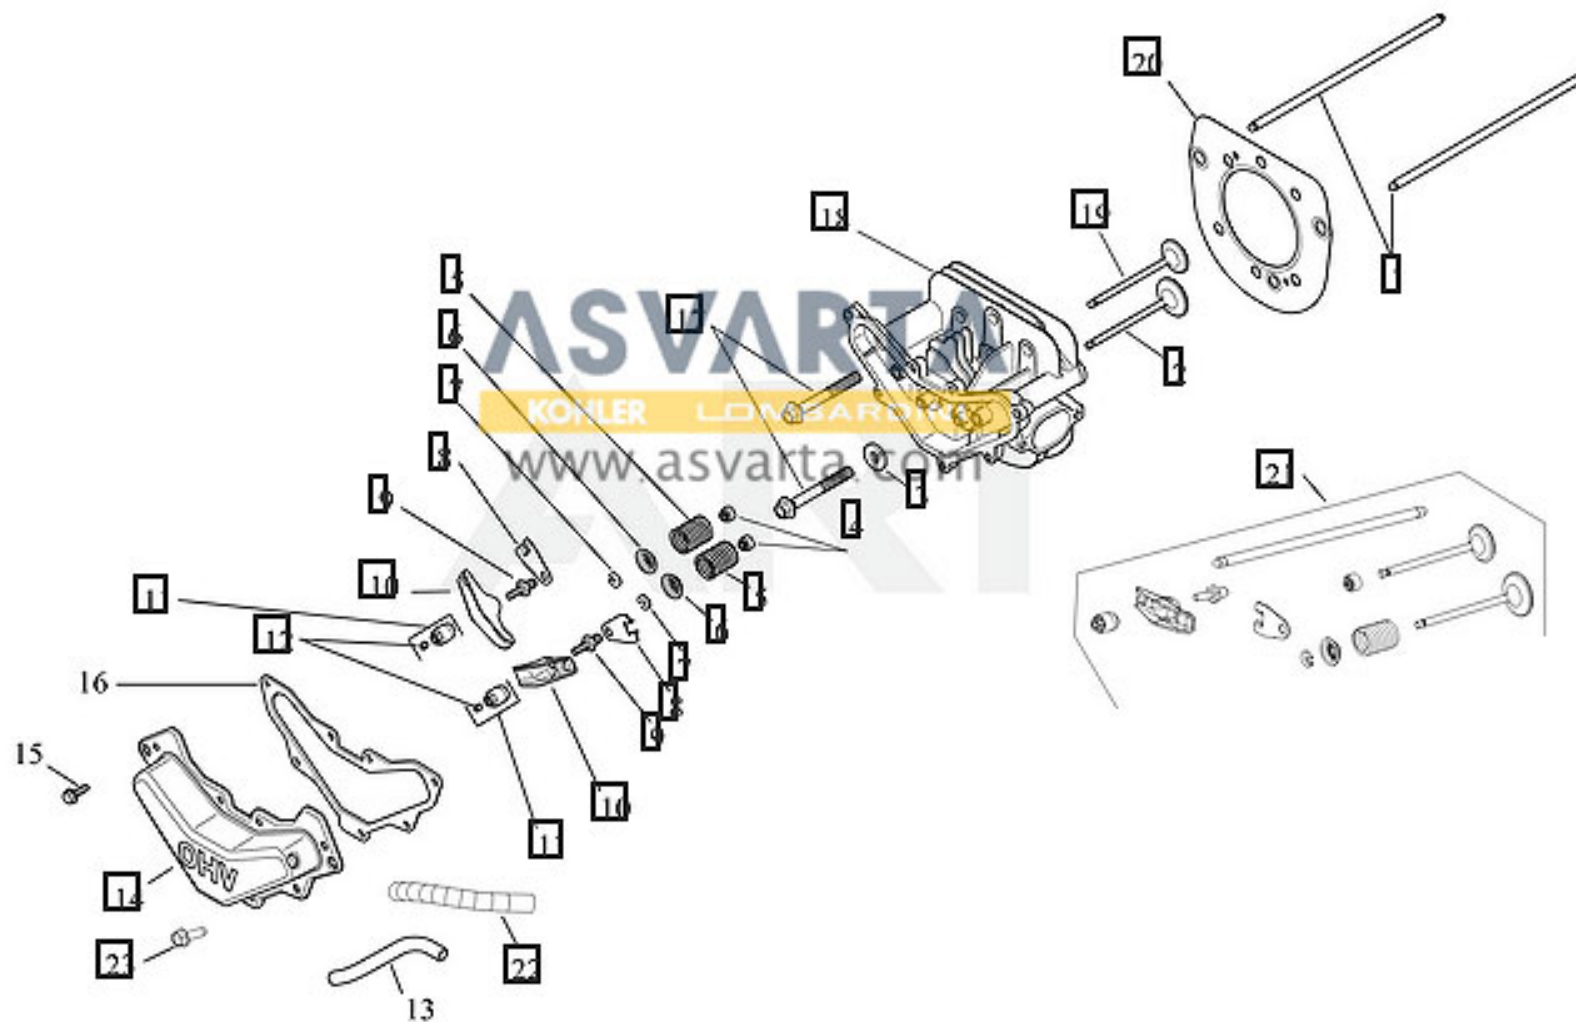





GROUP 6-BLOWER HOUSING  
SV470, 471, 480, 530, 540, 541, 590, 591, 600, 601, 610, 620

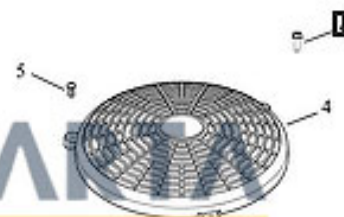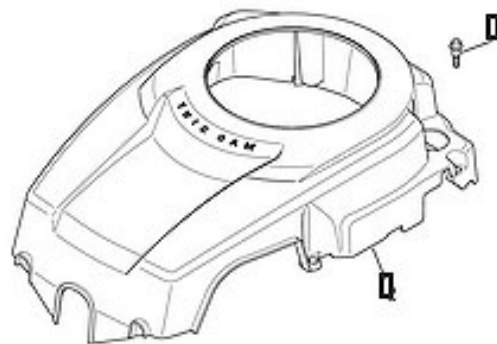

**ASVART**  
KOHLER LOMBARDINI  
[www.asvarta.com](http://www.asvarta.com)

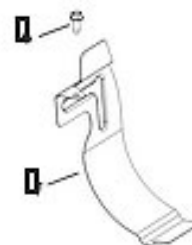


GROUP 7-STARTER  
SV470, 471, 480, 530, 540, 541, 590, 591, 600, 601, 610, 620

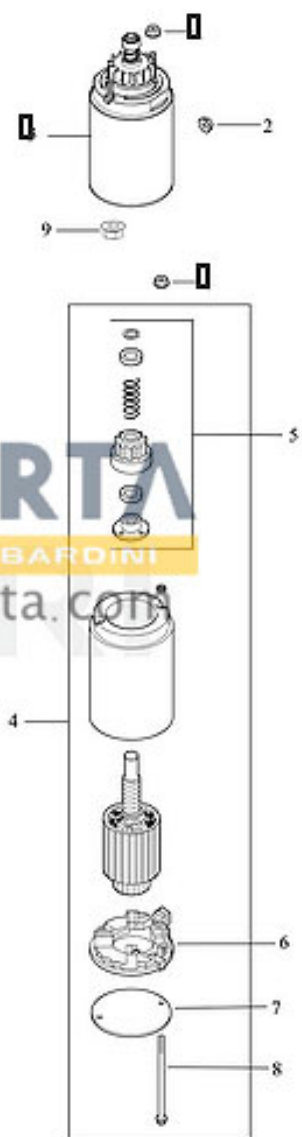




GROUP 8-FUEL SYSTEM  
SV470, 471, 480, 530, 540, 541, 590, 591, 600, 601, 610, 620

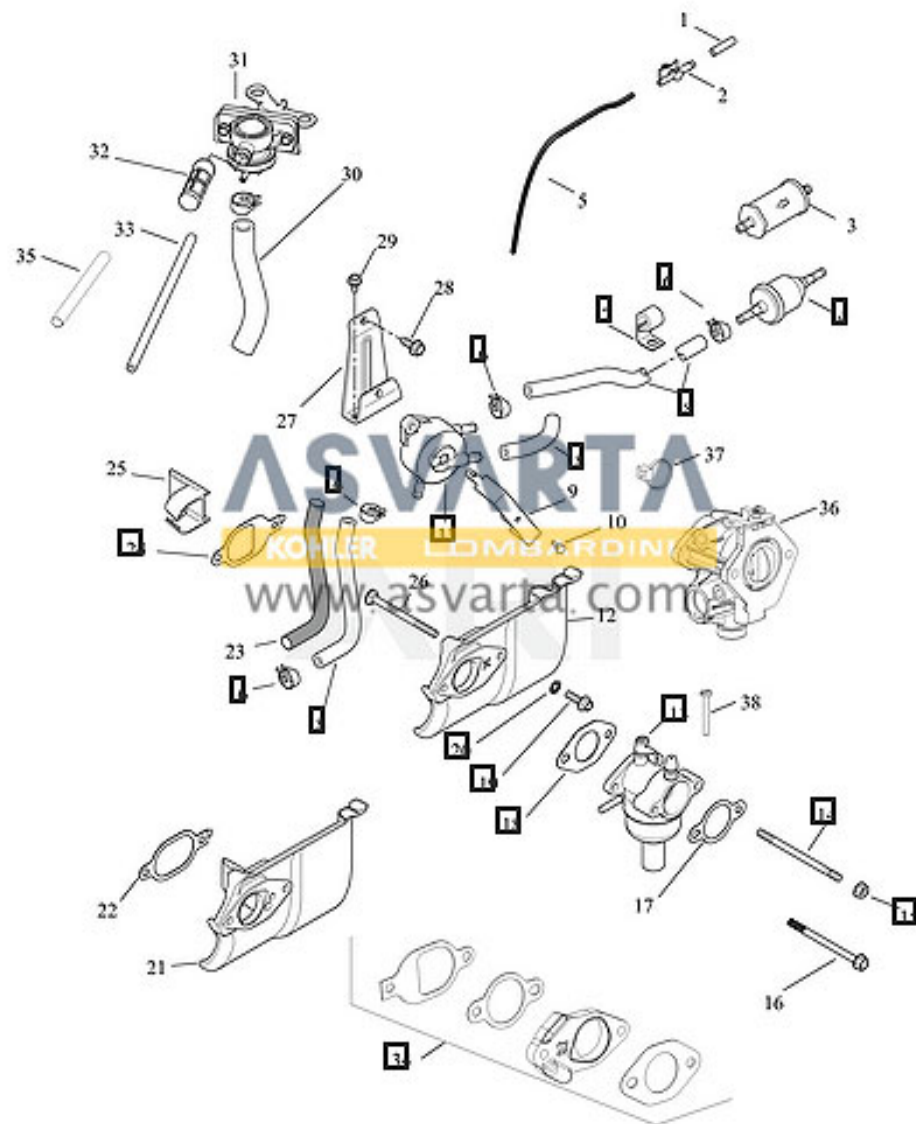




# GROUP 9-ENGINE CONTROLS

SV470, 471, 480, 530, 540, 541, 590, 591, 600, 601, 610, 620

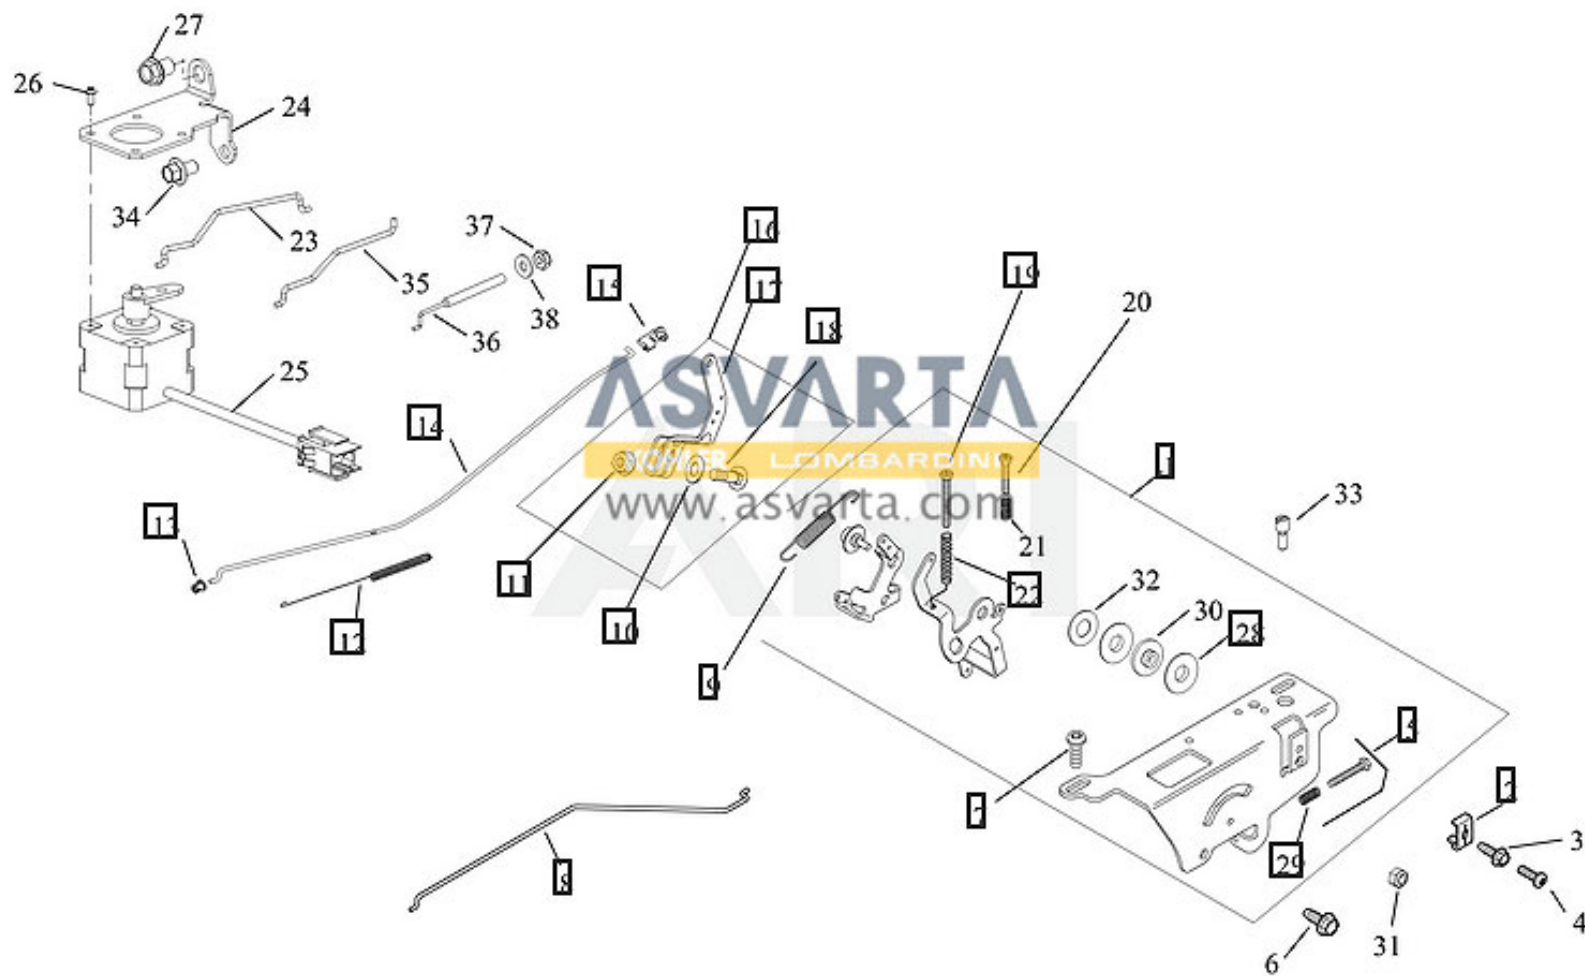

GROUP 10-AIR INTAKE

SV470, 471, 480, 530, 540, 541, 590, 591, 600, 601, 610, 620

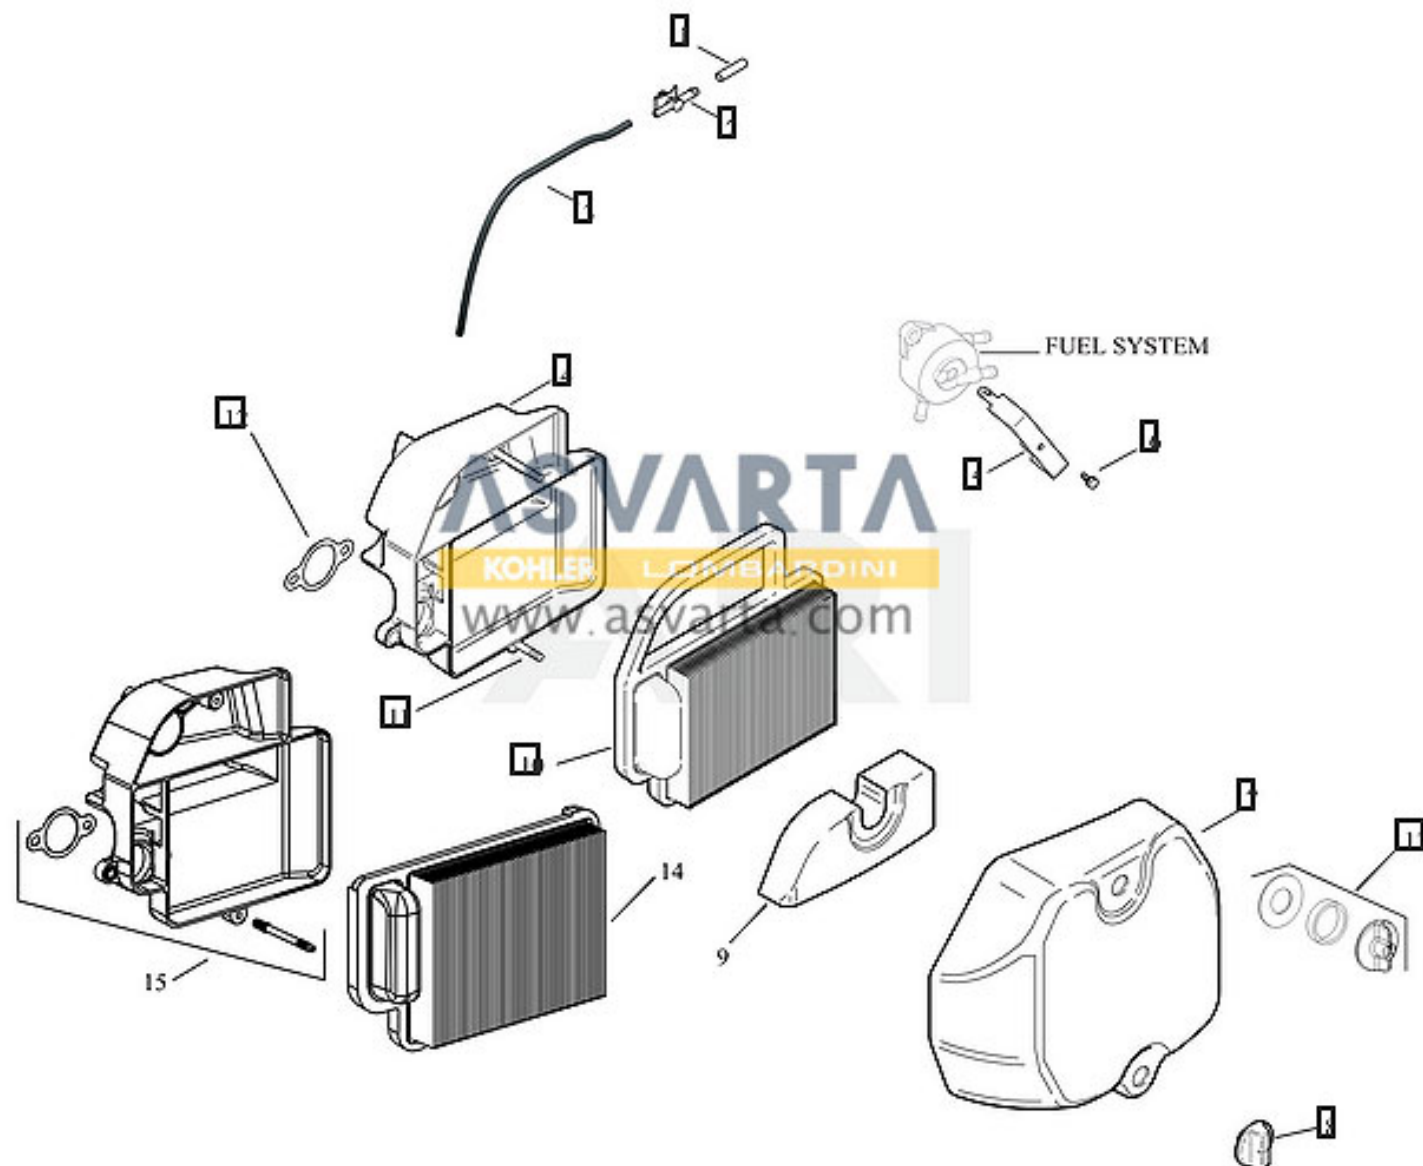

GROUP 11-EXHAUST

SV470, 471, 480, 530, 540, 541, 590, 591, 600, 601, 610, 620

